


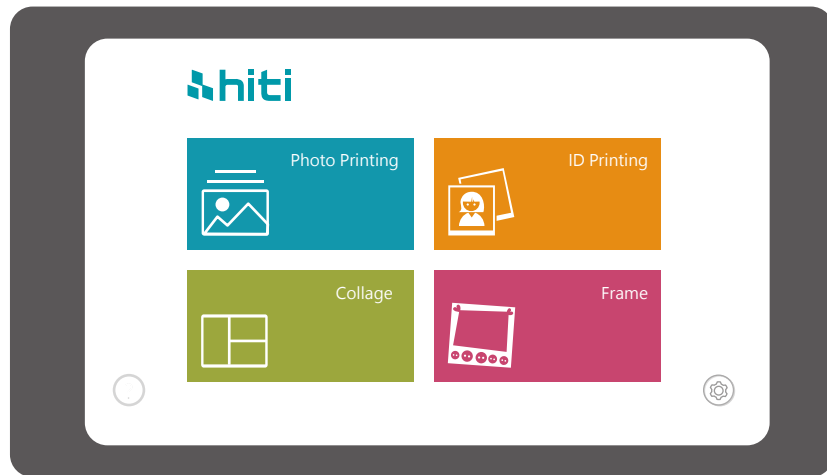

HC10 User Manual




HiTi Digital, Inc.
www.hiti.com

Connecting the printer with HC10 Controller


1. The printer MUST be updated to the latest Firmware in order to use the Controller.
2. Connect the printer to the Controller with custom cable, see diagram below.
3. Press  on the printer to turn on both the printer and the Controller.

Notice: The printer and the Controller can only be turned off from the App, not from , please beware.

For P310W/P322W

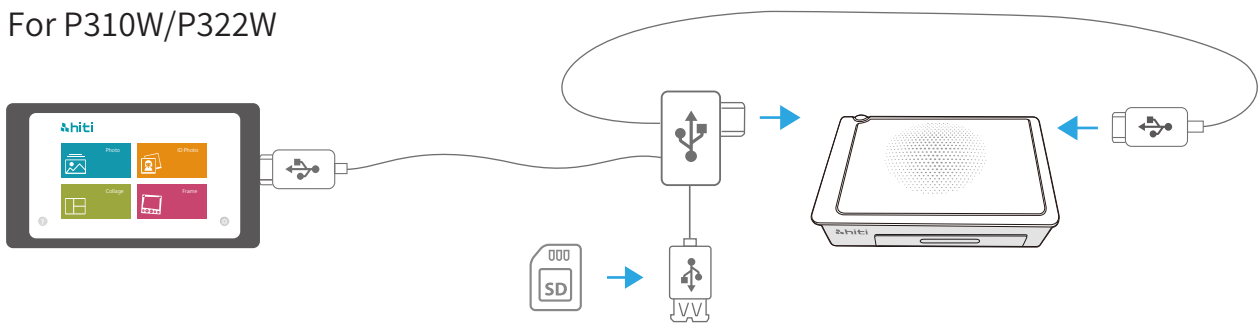

For P525L/P750

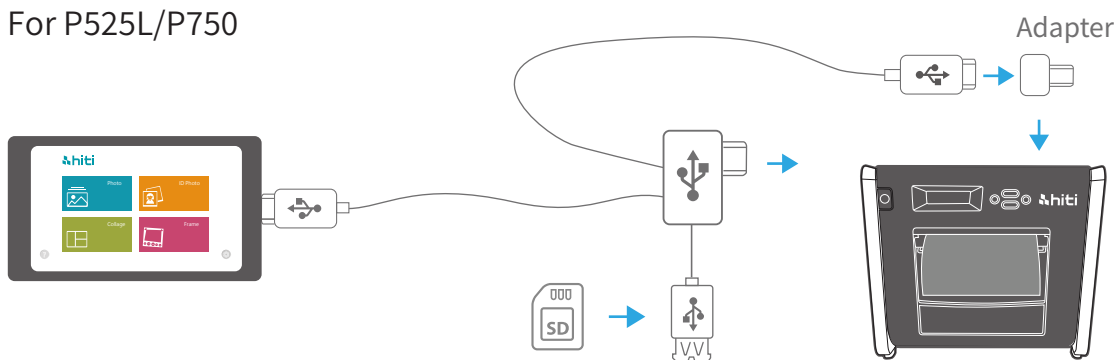

App Features

There are 4 main features, Photo Printing, ID Photos, Collages and Frames, in App.






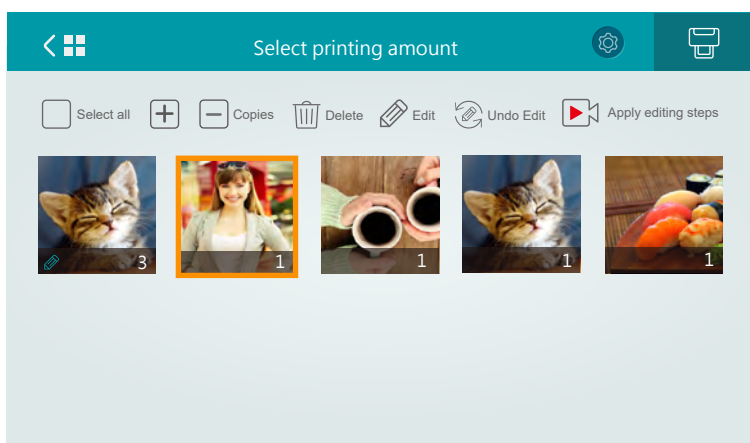
Photo Printing



- Select photos from different albums and press OK to next step.


NG

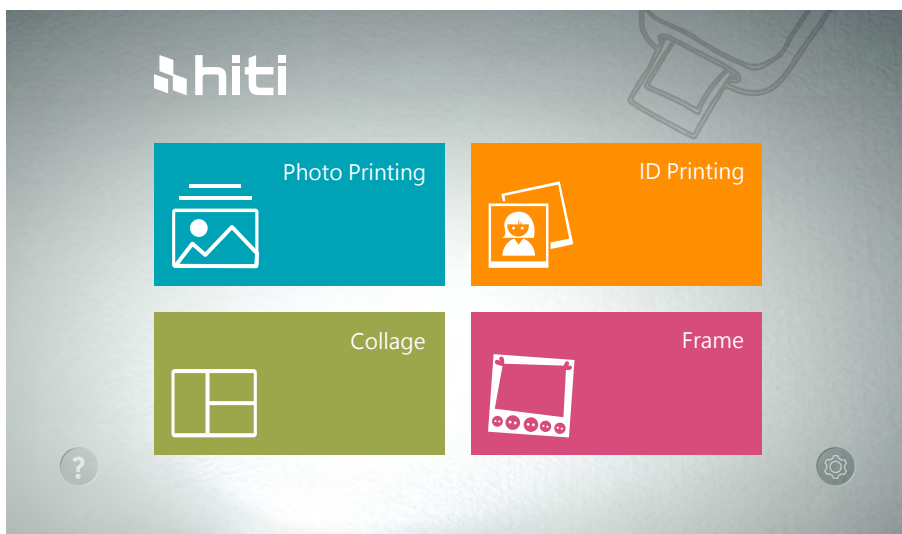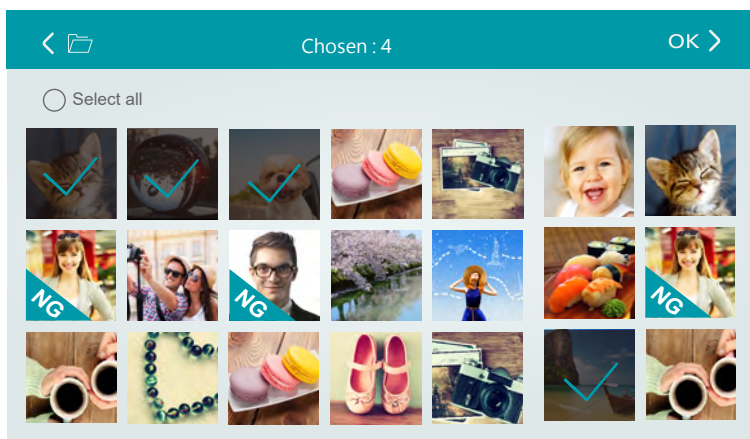NG" means the photo resolution is too low and may affect the print quality











-   Select number of copies to be printed for each photo.
-  Delete the photo/  Edit or  Undo Edit.
-  The adjustments of one photo can be applied to all selected photos.

Photo Printing : Edit photo



- Tap to Zoom in and out;
- Rotate the photo or
- Undo the adjustment.


- Move the photo Up; Down; Left or Right.

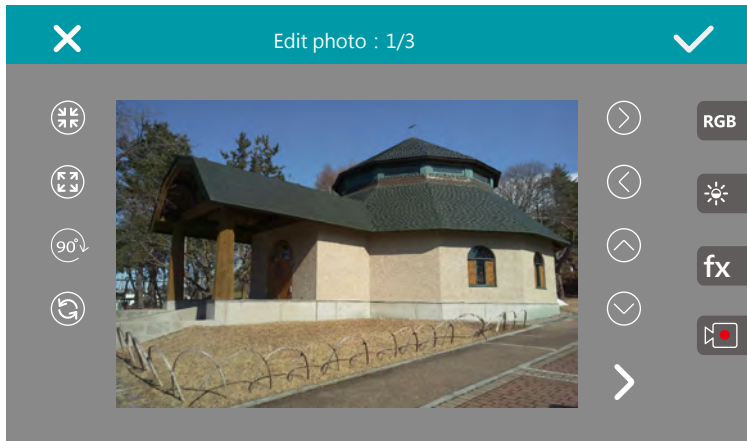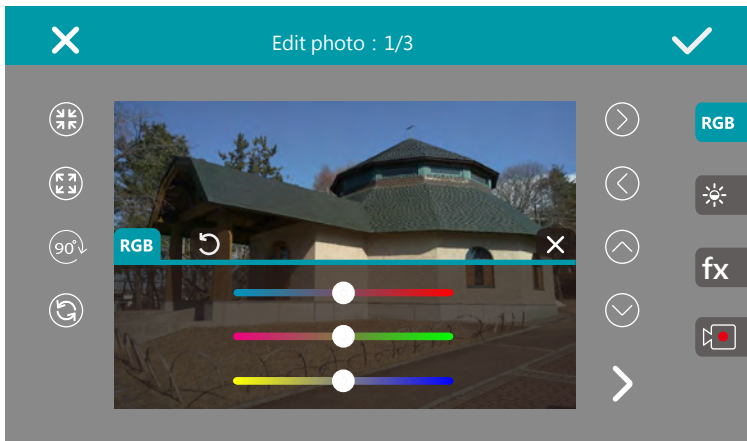


- Adjust **RGB**; Brightness; Contrast; Saturation or **fx** Filter.

- Store all the adjustments by pressing .


- Once done, click on the top right to go next step.

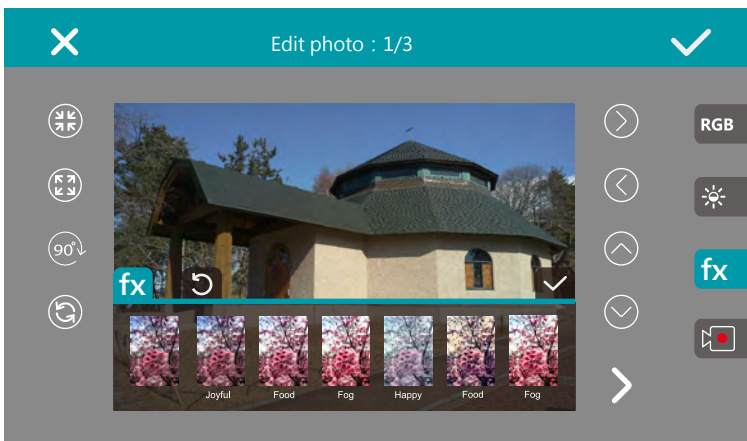


ID Photos

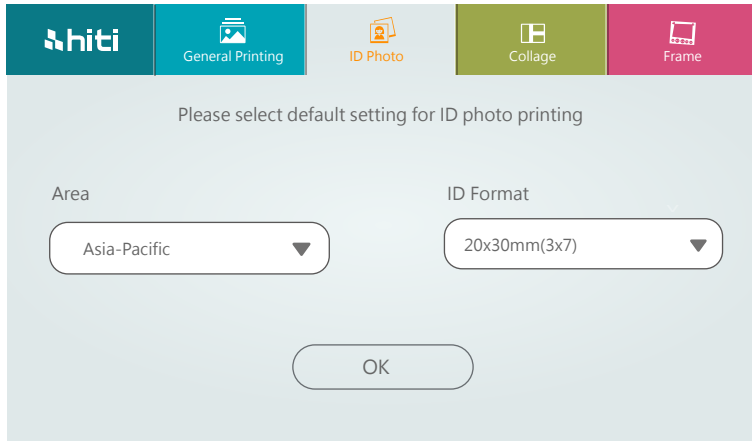

- Choose ID format.

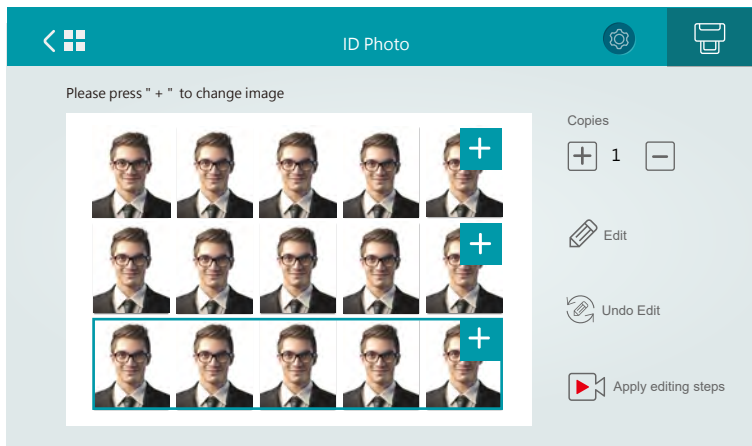


- Select photo to print.
- Change photo by pressing
- Select number of copies to be printed.

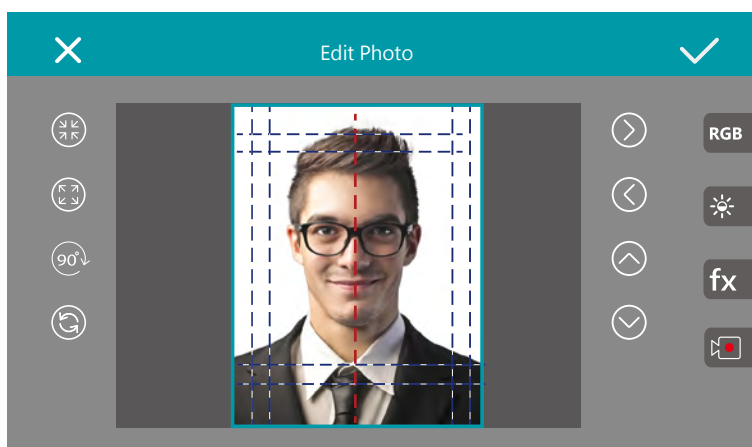


- Edit the photo like "Photo Printing".
- Biometric lines will appear to assist with alignment

Collage

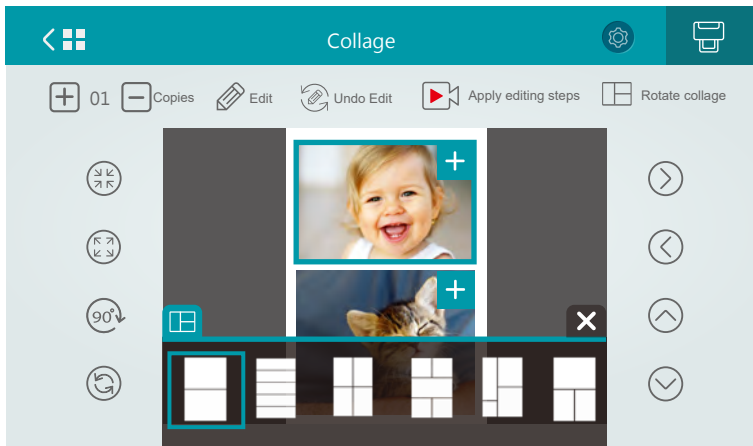


- Select your photos from the albums as in the Photo Printing section
- **+** Choose your desired collage format and edit each photo by pressing


Frame

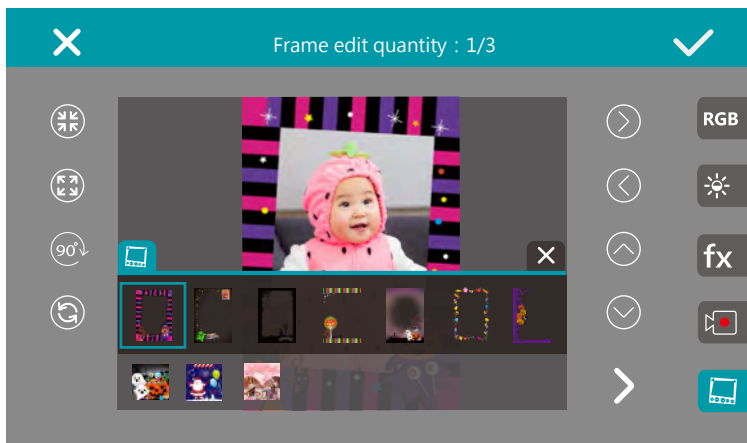

- Select your photos from the albums as in the Photo Printing section
- Edit the photos, add desired frame and print.

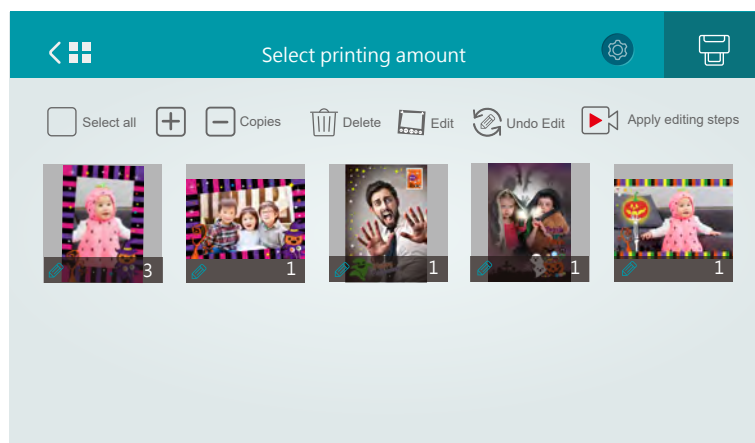


Setting

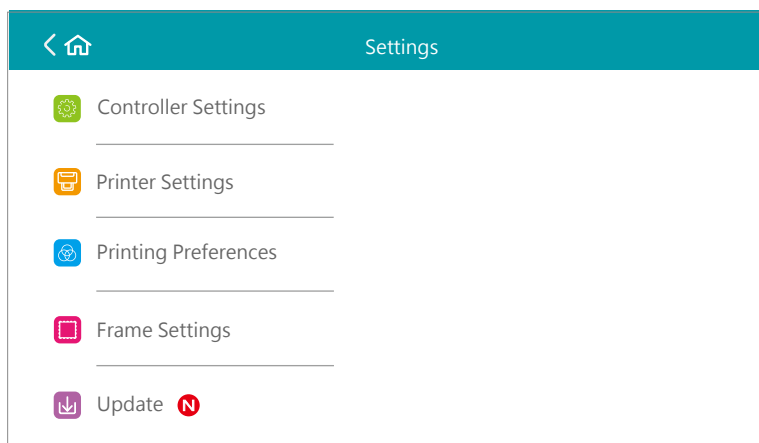


There are 5 functions available in Setting: Controller; Printer; Print Preference; Frame and Version Update.

Setting: Controller

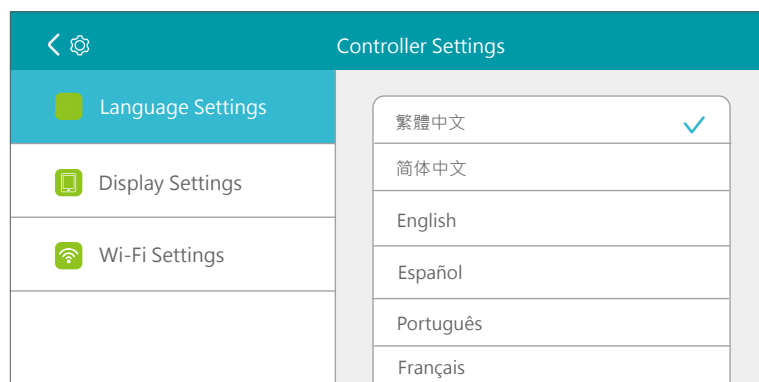


Language:

There are 8 languages available, including Traditional Chinese/ Simplified Chinese/ English/ Spanish/ Portuguese/ Italian/ French/ German.

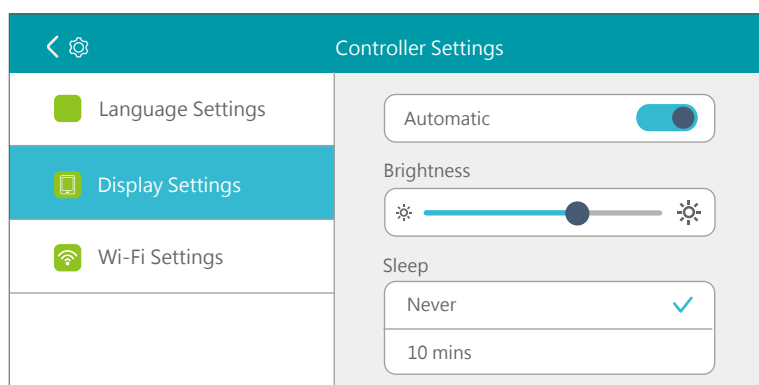

Display Set Up:


Brightness and Sleep Mode can be adjusted from here.

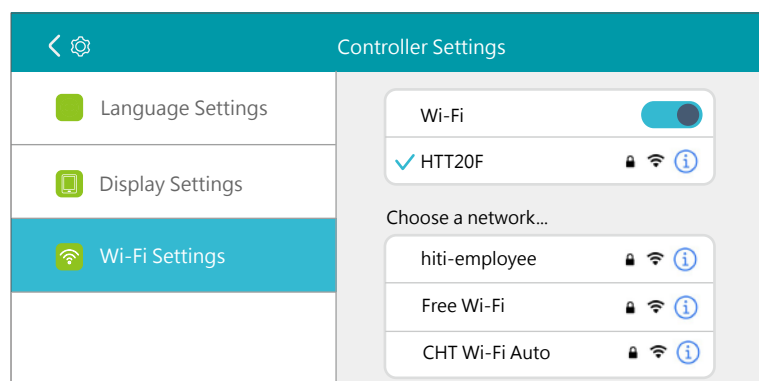

Wi-Fi Set Up:

Connect Wi-Fi from the location you are using Controller and you can update the latest App or Printer Firmware version via Wi-Fi.


Setting: Printer Settings

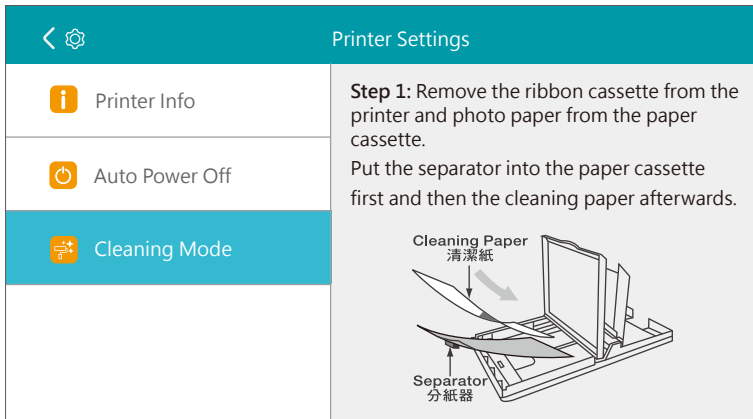

Cleaning Mode:


The printer should be cleaned every 120 prints. Follow the instruction shown to clean the printer.

Setting: Printing Preference

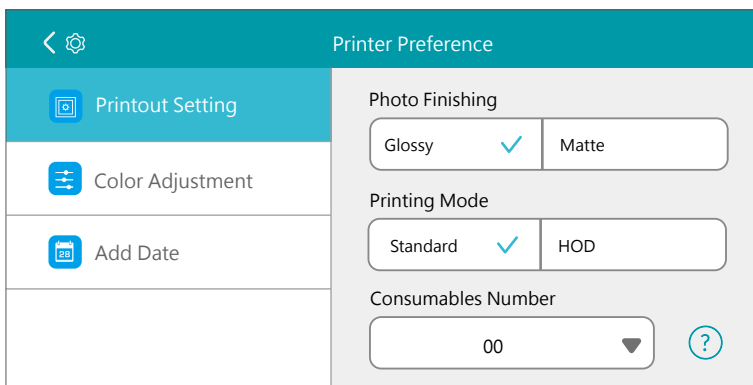


Printing Preference:

Set up Photo Finish, Printing Method and Print Kit Version here.

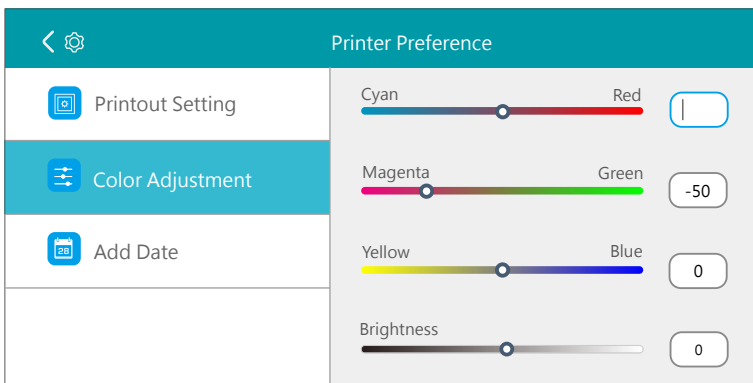

Colors Adjustment:


Apply color tone adjustment to all prints created by the Controller.

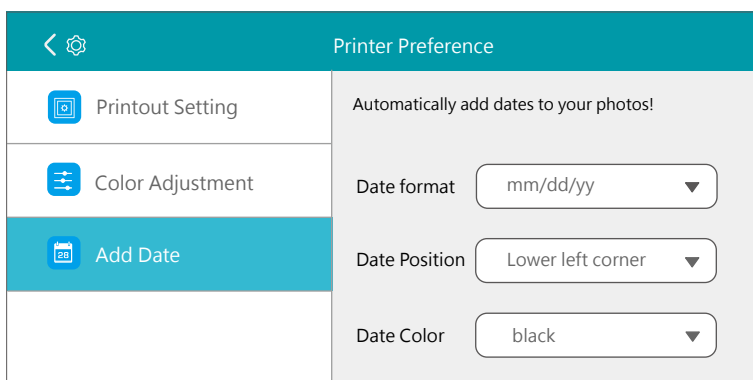

Add Dates on photo:

Add the date of the photograph in your chosen color and location to all photos.

Setting: Frame

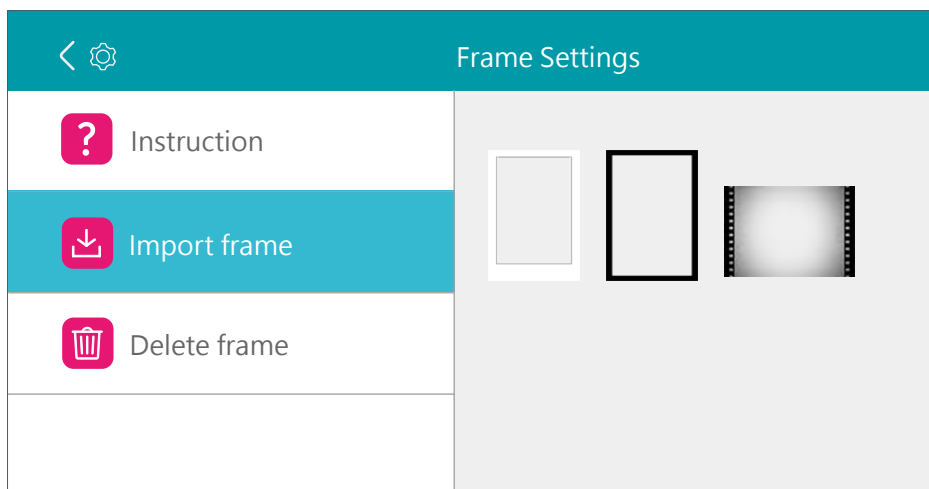


Add own frames on photo:
Follow the instructions on screen to add your own custom frames to the Controller.

Setting: Version Update

System Update Notification **N**

If an **N** symbol appears when you connect the controller to the internet, a new update is available for the Controller or printer. You can update via Wi-Fi, or via USB storage if Wi-Fi connection is not available. The latest version of all firmware and software are available from the HiTi website

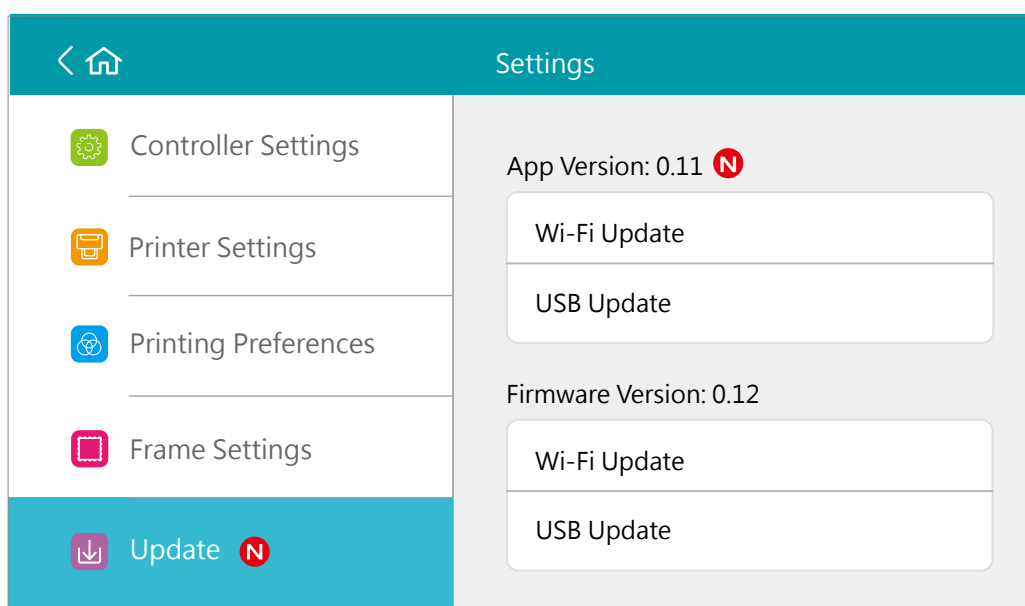

※ The operation process is subject to change without notice