



Ribbon Installation


- 1 Check ribbon's take up side and supply side, then place the ribbon onto ribbon cartridge as indicated to install the ribbon.

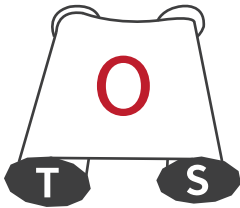

S: Supply side
T: Take up side

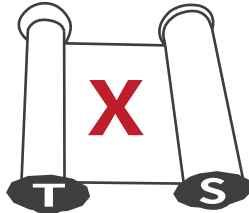


S: Supply side
T: Take up side

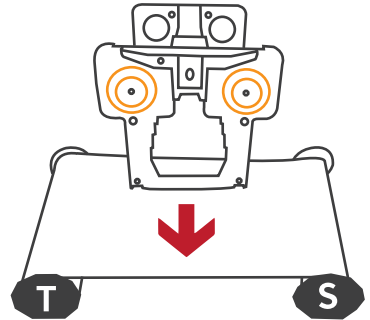

- 2 Install the ribbon onto cartridge.


Press down on arrow indicated part, and scroll the ribbon as tight as possible.

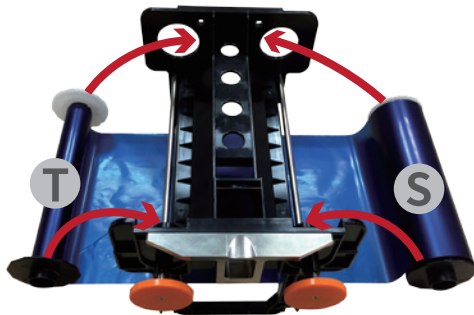


Ribbon Installation

3

Slide the circled parts in place, and place each YMCO cartridge in corresponding slots.

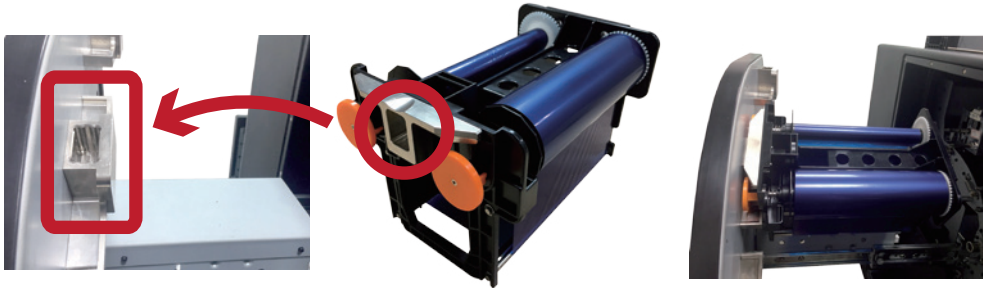

4

Push the ribbon slots back into the printer tightly, then scroll the knob tight until the indicator on the knob match the indicator on the printer.

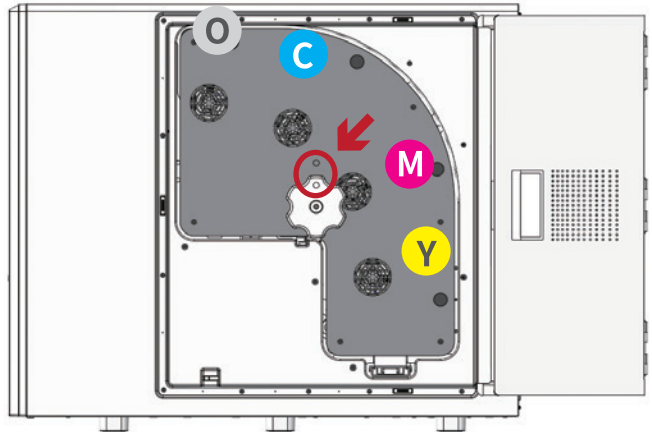


Paper Installation

- 1** Open paper drawer.
Assemble the flange to photo paper.

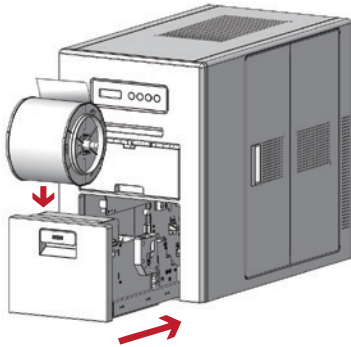


Put the photo paper set into the printer and push the drawer back to its original position.


- 2** Remove sticker label, then roll the paper in the direction indicated by the arrow, until the opening is facing down.

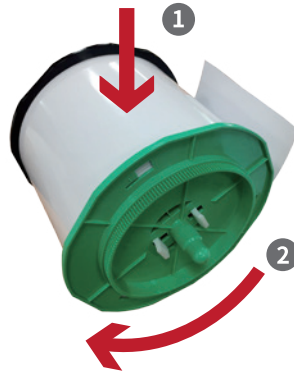

- !** When you place the paper roll back into the printer, make sure the paper roll opening is not visible, or else it might lead to a jam.

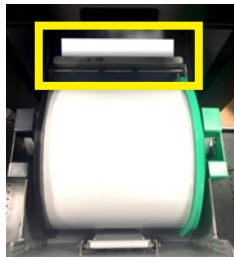

X Incorrect, paper roll opening is visible, might lead to a jam.

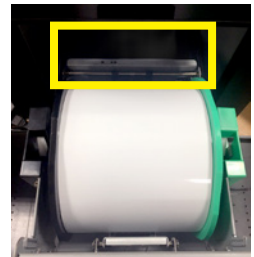


O Correct, paper roll opening is not visible.


Print Fail Error Handling

Paper Handling

! When print fail or paper jam occurs, please turn off the printer first. Then open and pull out ribbon door, open paper door, then roll out jammed paper. If issue still occurs, please contact local technical support.

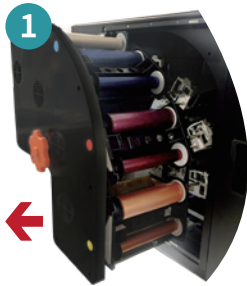


1 Turn off printer, open and pull out ribbon door. Make sure to separate ribbon cartridge from the printer, cut ribbon if it is jammed into the printer.*

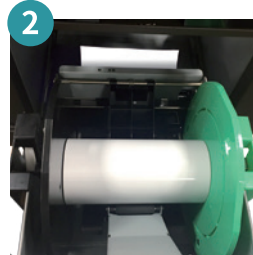

2 Open paper door.*



3 Hold onto the flange and roll it as the arrow indicated to roll out jammed paper.*

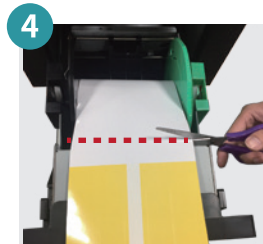

4 Cut off paper jam part.

*There might be some resistance.

Ribbon Handling

! In case of loose ribbon, scroll the ribbon as tight as possible. If there is a tear in the ribbon, tape it back together, then scroll till the broken part of the ribbon cannot be seen. If issue still occurs, please contact local technical support.

! In case of other errors such as CAM error or Cutter error, do not open paper door or ribbon door. Please restart the printer first, if printer does not show "Printer Ready" and error still occurs, please contact local technical support.



X610 Video Guide



X610 User Manual