



Ribbon Cartridge Installation / 色带安装说明 / 色帶安裝說明

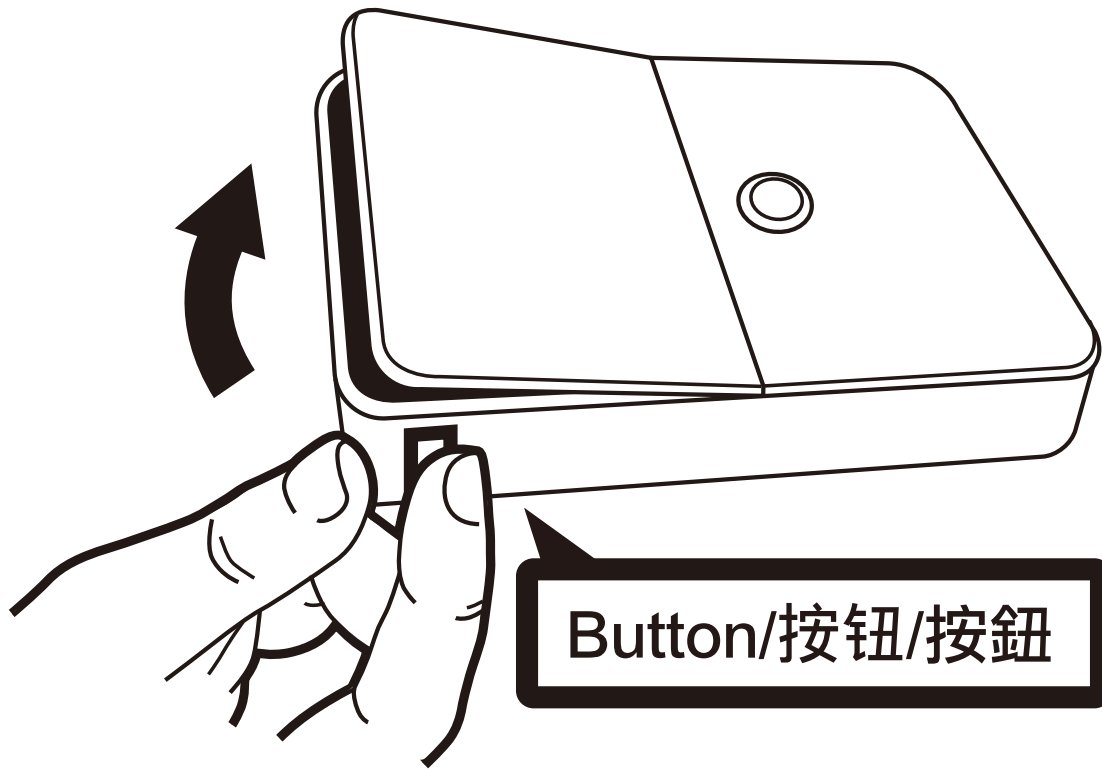

Button/按钮/按鈕


Warning/高温勿触/高溫勿觸

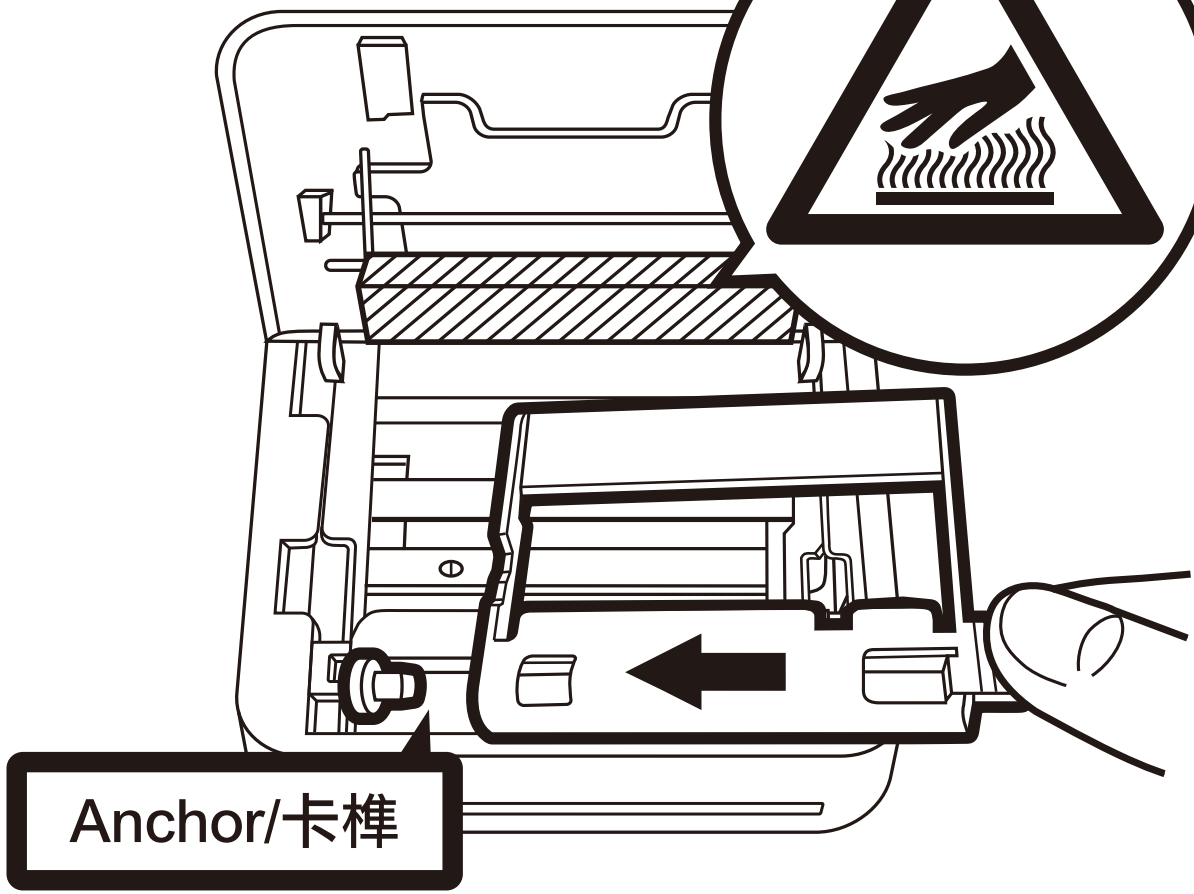


Anchor/卡榫

Photo Paper Installation / 相纸安装说明 / 相紙安裝說明

Please touch paper's margin only
 拿取纸张时, 请手握纸张的边缘
 拿取紙張時, 請手握紙張的邊緣

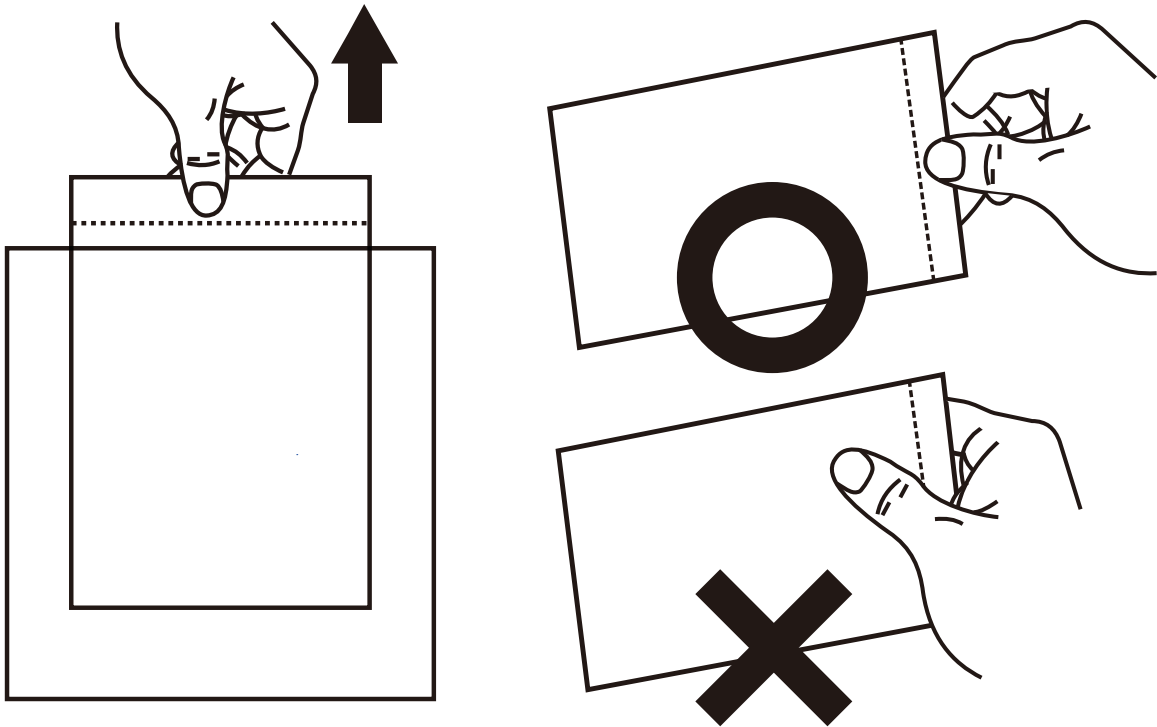

Make sure load paper with glossy side facing down, detachable border toward paper door button
 放置相纸时光滑面需朝下、折撕边需朝纸门按钮
 放置相紙時光滑面需朝下、折撕邊需朝紙門按鈕

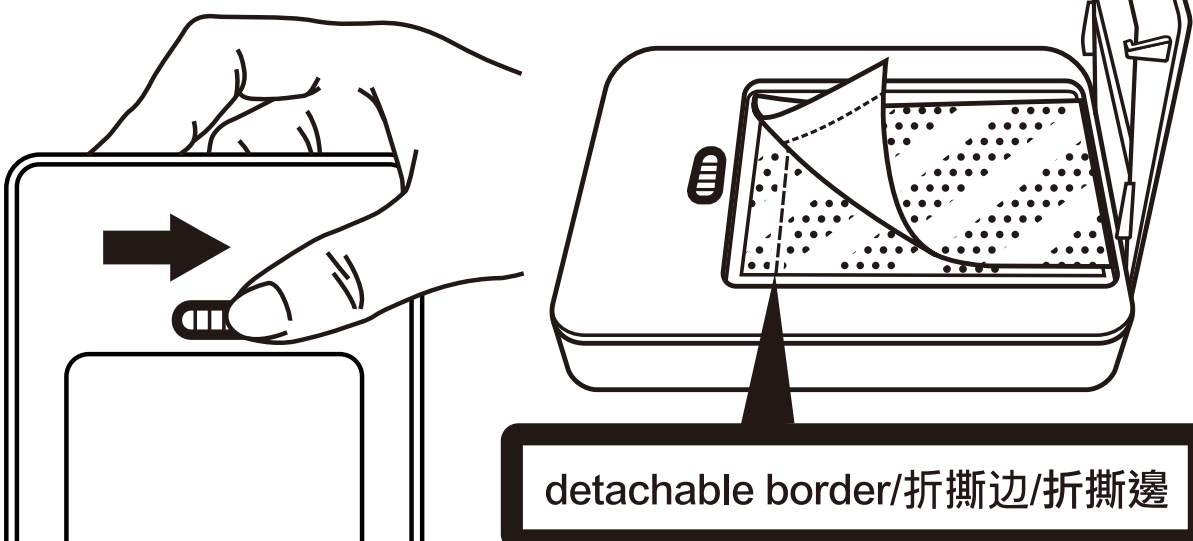

detachable border/折撕边/折撕邊

